



# INSTALLATION GUIDE

- ◆ Prohibit eating.
- ◆ Keep away from fires and other sources of heat.

# CATALOGUE

---

1. Installation Recommendations .....	1
2. Fence Installation .....	2~9
3. Project Installation .....	10~17
4. Hedge Installation On Concrete Walls .....	18~28
5. Packing list .....	29

Must ask a professional construction team if you need to  
install large-scale projects




# Green life, ———— Solution




# Installation Recommendations

16 supporting (connection) points are suggested  
on each piece size 50x50cm

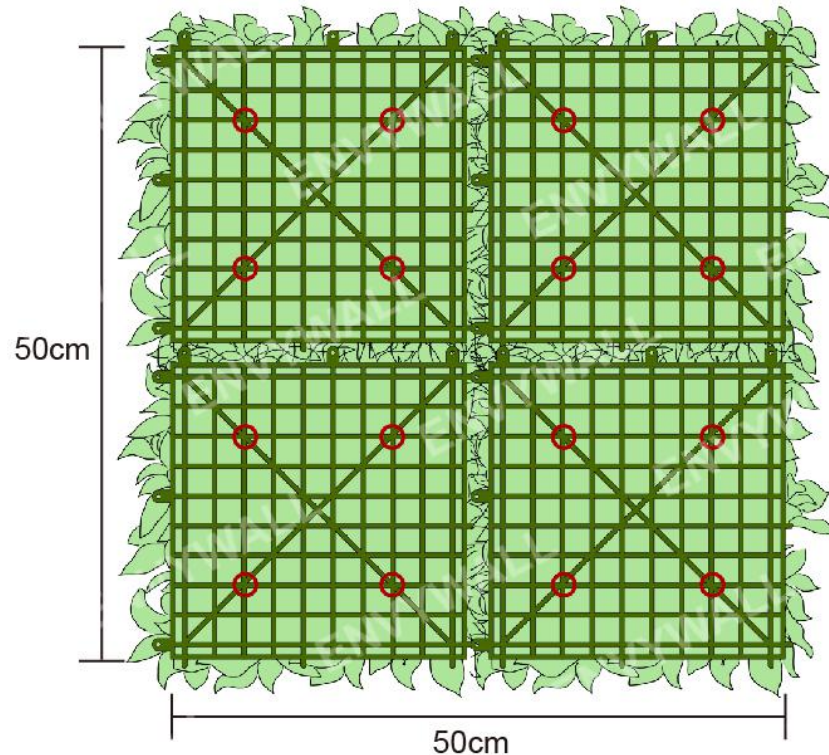

• Proposed fixed method •

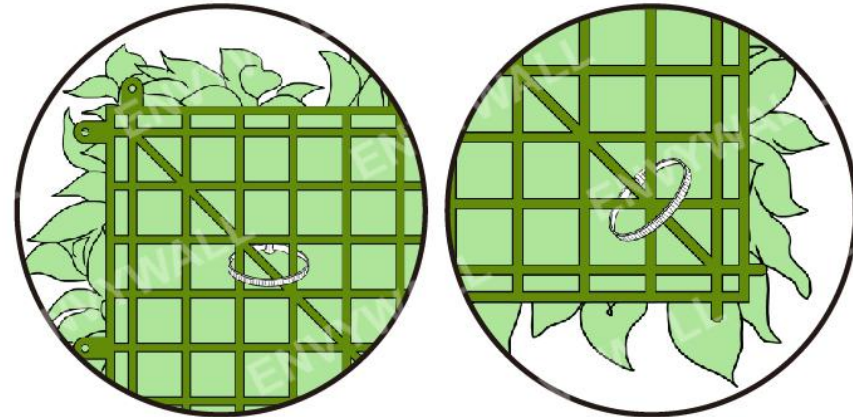

If it is installed at place where the backing will be exposed to sunlight,  
it is recommended to install a sun-shading net with UV protection to extend backing's life.

# Fence installation

---


with zip ties  
(Applicable for both iron fence  
or wooden fence)



# TOOLS NEEDED



Long tape

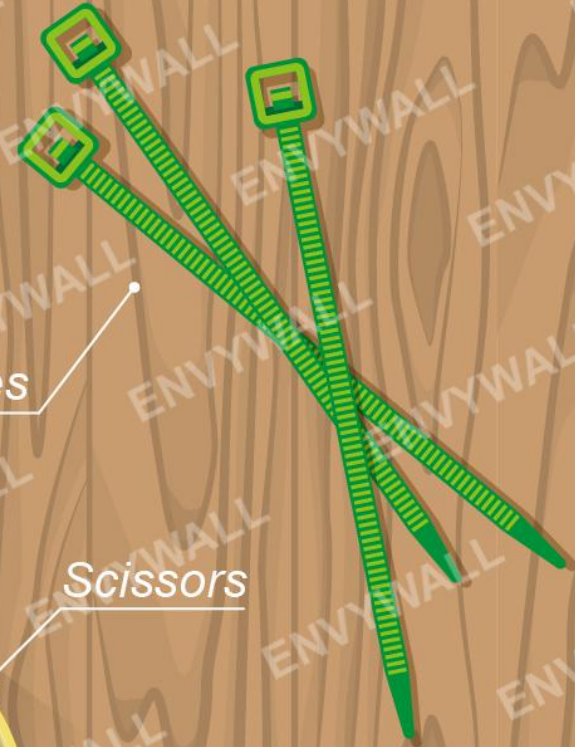

Zip Ties



Scissors

Measure the wall to confirm the envywall mats quantity needed in the installation.



1 pcs = 0.50m × 0.50m | covering 0.25m<sup>2</sup>

6 pcs = 0.25m<sup>2</sup> × 6 = 1.5 m<sup>2</sup>

12 pcs = 0.25m<sup>2</sup> × 12 = 3.0 m<sup>2</sup>

24 pcs = 0.25m<sup>2</sup> × 24 = 6.0 m<sup>2</sup>


1 pcs = 1.64ft × 1.64ft | covering 2.68sq.ft

6 pcs = 2.68sq.ft × 6 = 16.08 sq.ft

12 pcs = 2.68sq.ft × 12 = 32.16 sq.ft


24 pcs = 2.68sq.ft × 24 = 64.32 sq.ft



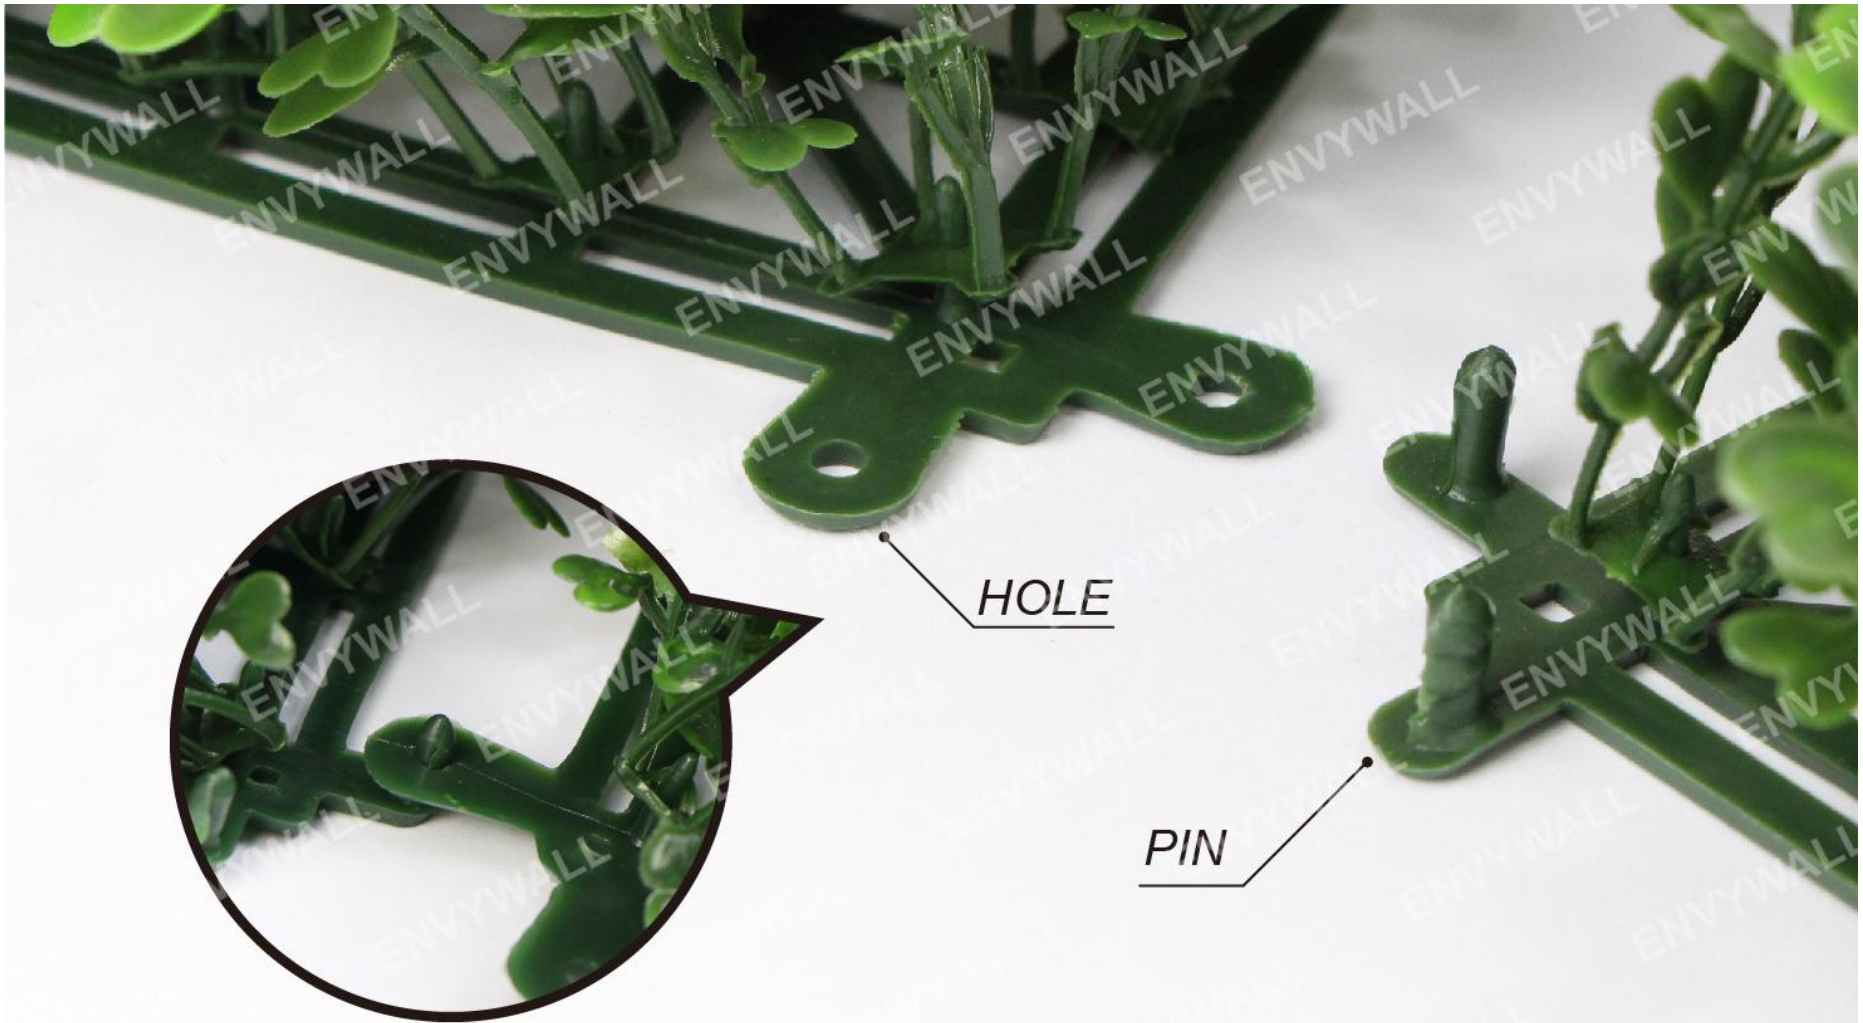

Snap&lock the envywall mats for easy installation.


Fix them together as your required size.

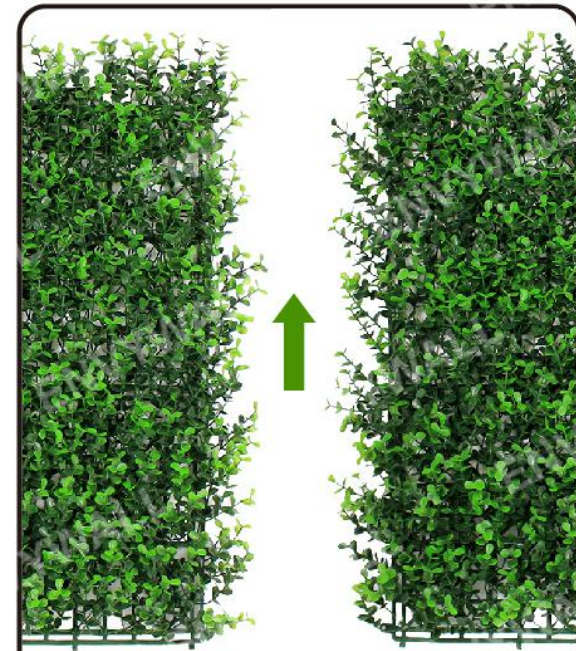

For other models, please pay attention to the splicing direction. Place all the leaves upwards and then splice.



Fix the aligned envywall mats on the fence with zip ties.

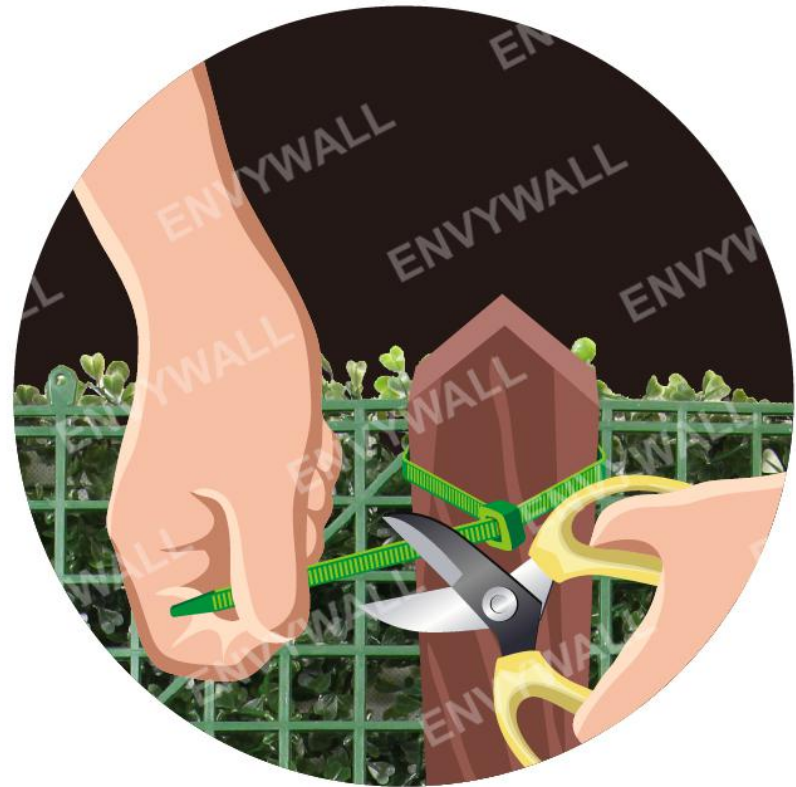

Trim the extra zip ties to finish the installation.

Finished!



You can cut the extra envywalls with scissors to make the envywalls fit your wall or fence better



# Project Installation

---

with pneumatic steel nail gun  
(suitable for wooden and cement walls)

# TOOLS NEEDED

Pen



pneumatic nail gun



Long tape



Goggles

Scissors




Measure the wall to confirm the envywall mats quantity needed in the installation.




1 pcs = 0.50m × 0.50m	covering 0.25m <sup>2</sup>	
6 pcs = 0.25m <sup>2</sup> × 6 = 1.5 m <sup>2</sup>		
12 pcs = 0.25m <sup>2</sup> × 12 = 3.0 m <sup>2</sup>		
24 pcs = 0.25m <sup>2</sup> × 24 = 6.0 m <sup>2</sup>		
1 pcs = 1.64ft × 1.64ft		covering 2.68sq.ft
6 pcs = 2.68sq.ft × 6 = 16.08 sq.ft		
12 pcs = 2.68sq.ft × 12 = 32.16 sq.ft		
24 pcs = 2.68sq.ft × 24 = 64.32 sq.ft		



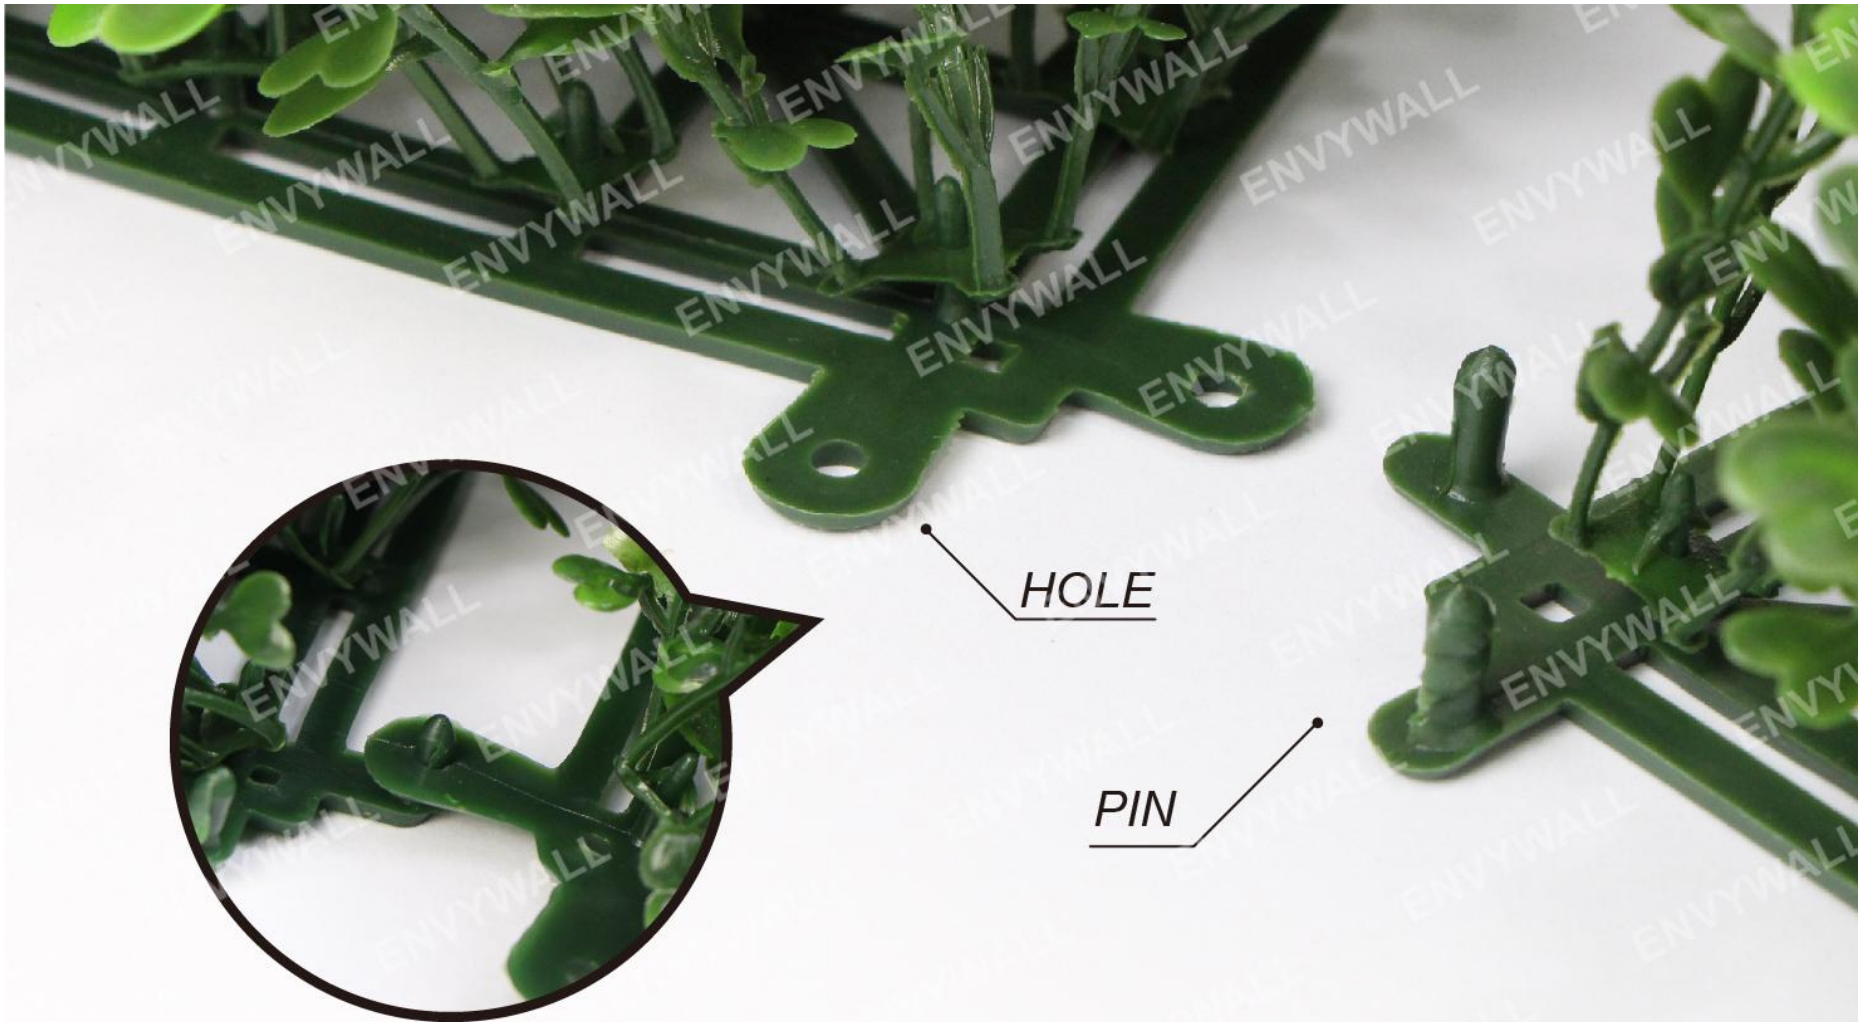

Snap&lock the envywall mats for easy installation.

Fix them together as your required size.

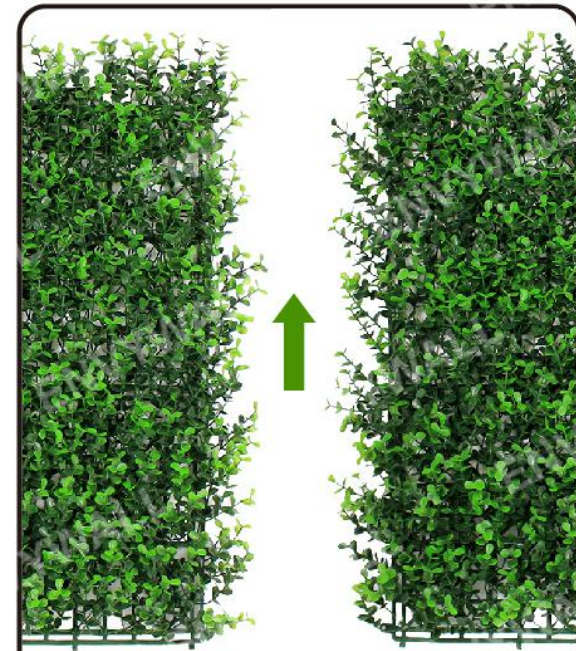

For other models, please pay attention to the splicing direction. Place all the leaves upwards and then splice.



Secure the envywall mats with an pneumatic nail gun

Secure the envywall mats with an pneumatic nail gun and trim the extra zip ties with scissors to finish the installation.





Must ask a professional construction team if you need to install large-scale projects. You can cut the extra envywalls with scissors to make the envywalls fit your wall or fence better.



# Envywall Installation On Concrete Walls

---

with screws&expansion bolts

# TOOLS NEEDED



Pen



Hammer



Electric drill & drill bit



Scissors



Screw - driver



Goggles



Long tape



Expansion bolts



Screws & screw shims

Steel wire grid



Measure the wall to confirm the envywall mats quantity needed in the installation.



$1 \text{ pcs} = 0.50\text{m} \times 0.50\text{m}$	covering $0.25\text{m}^2$
--	---------------------------

$6 \text{ pcs} = 0.25\text{m}^2 \times 6 = 1.5 \text{ m}^2$
---

$12 \text{ pcs} = 0.25\text{m}^2 \times 12 = 3.0 \text{ m}^2$
---

$24 \text{ pcs} = 0.25\text{m}^2 \times 24 = 6.0 \text{ m}^2$
---


$1 \text{ pcs} = 1.64\text{ft} \times 1.64\text{ft}$	covering $2.68\text{sq.ft}$
--	-----------------------------

$6 \text{ pcs} = 2.68\text{sq.ft} \times 6 = 16.08 \text{ sq.ft}$
---

$12 \text{ pcs} = 2.68\text{sq.ft} \times 12 = 32.16 \text{ sq.ft}$
---


$24 \text{ pcs} = 2.68\text{sq.ft} \times 24 = 64.32 \text{ sq.ft}$
---



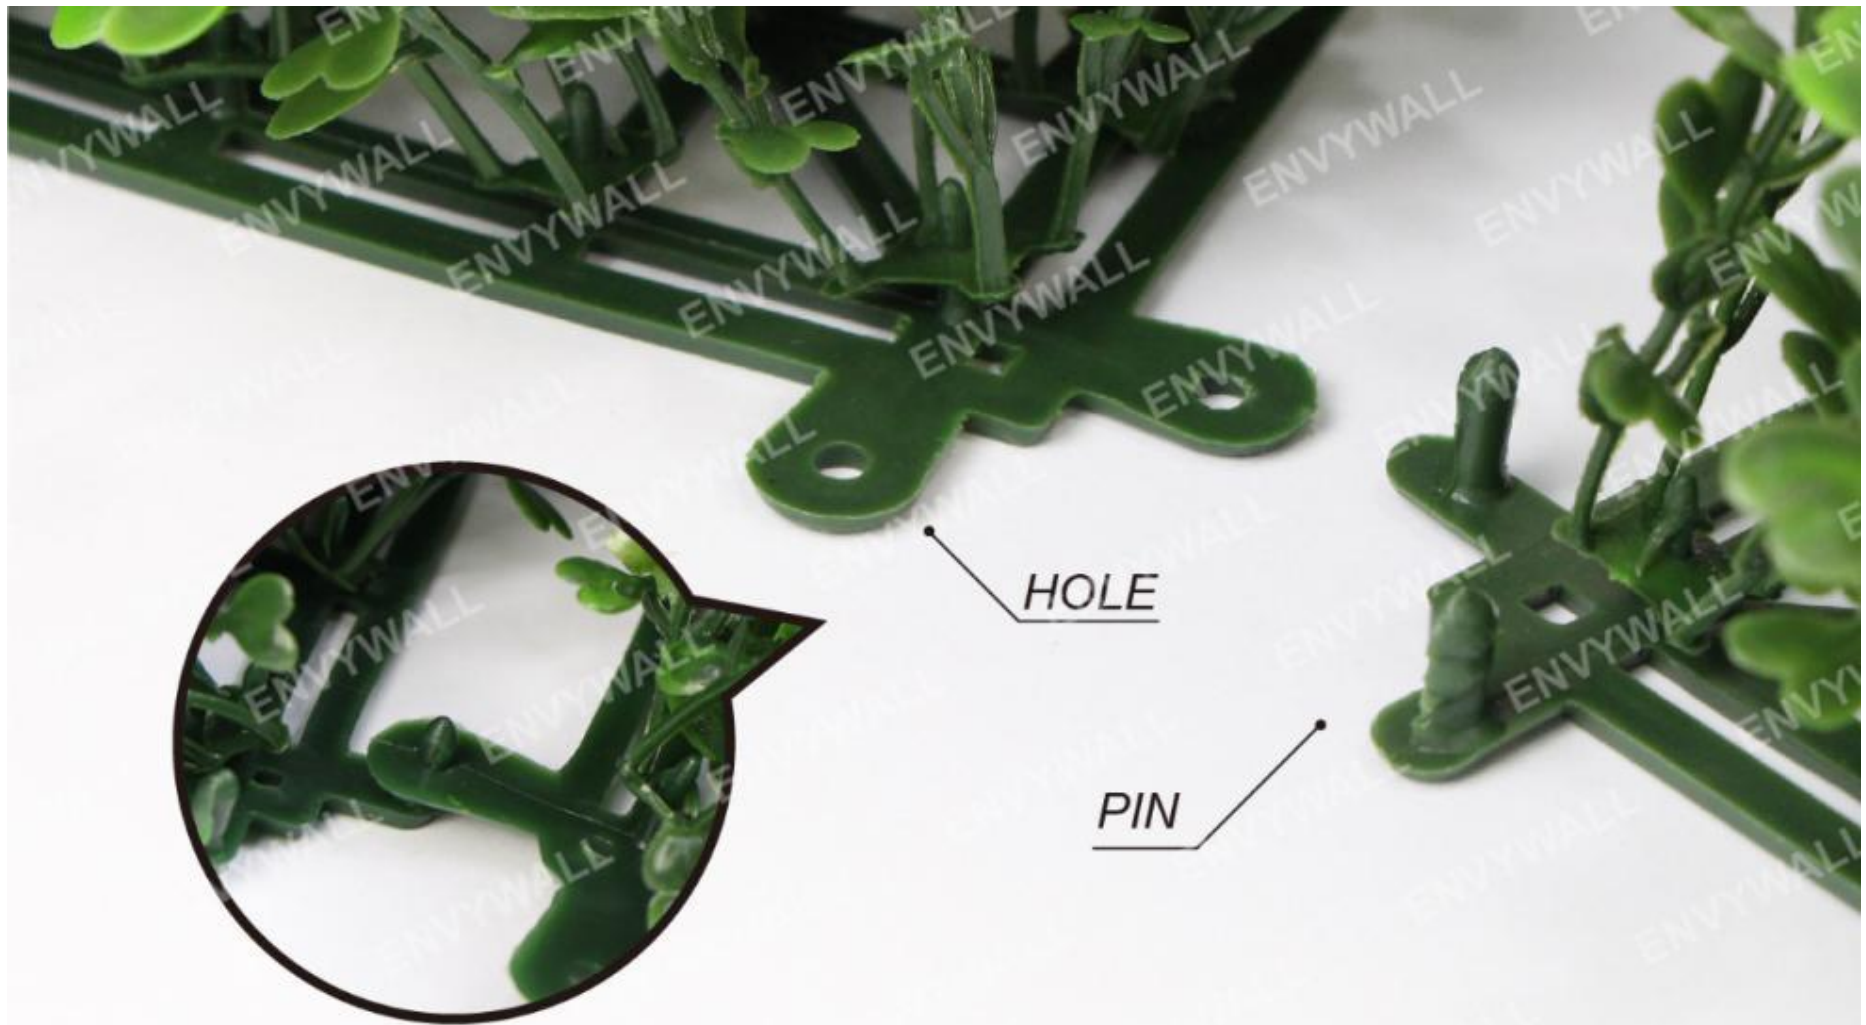

Snap&lock the envywall mats for easy installation.

Fix them together as your required size.

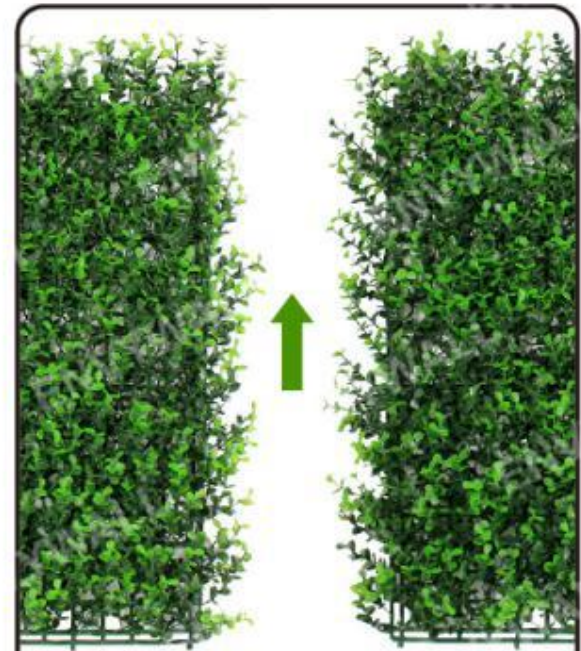



For other models, please pay attention to the splicing direction. Place all the leaves upwards and then splice.




Measure to define  
the fixed point.

Suggested 40-45cm  
between nails.



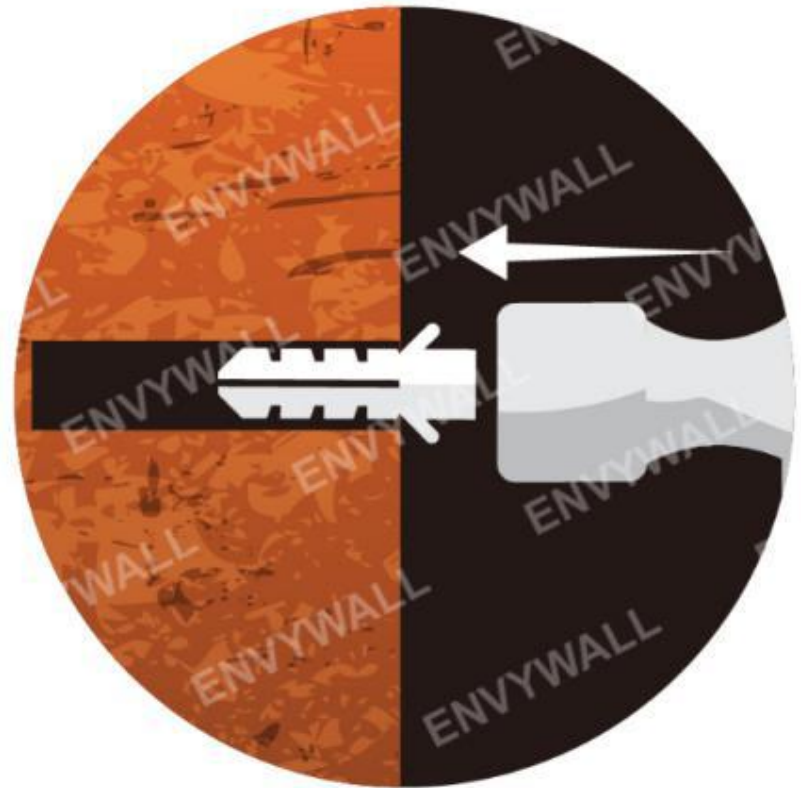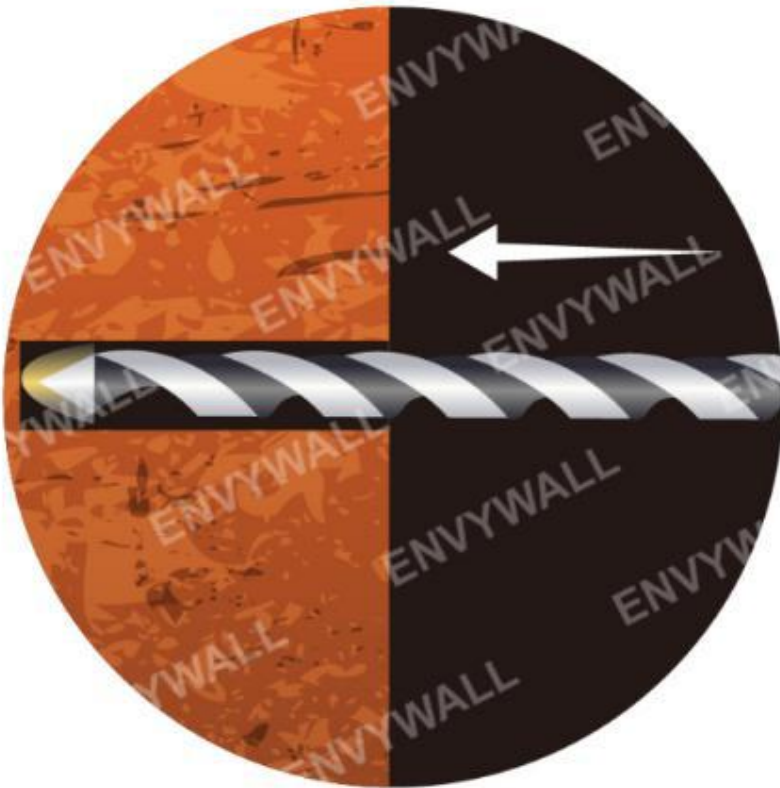

Puch the fixed points with electric drill and  
put the expansion drill in the hole.

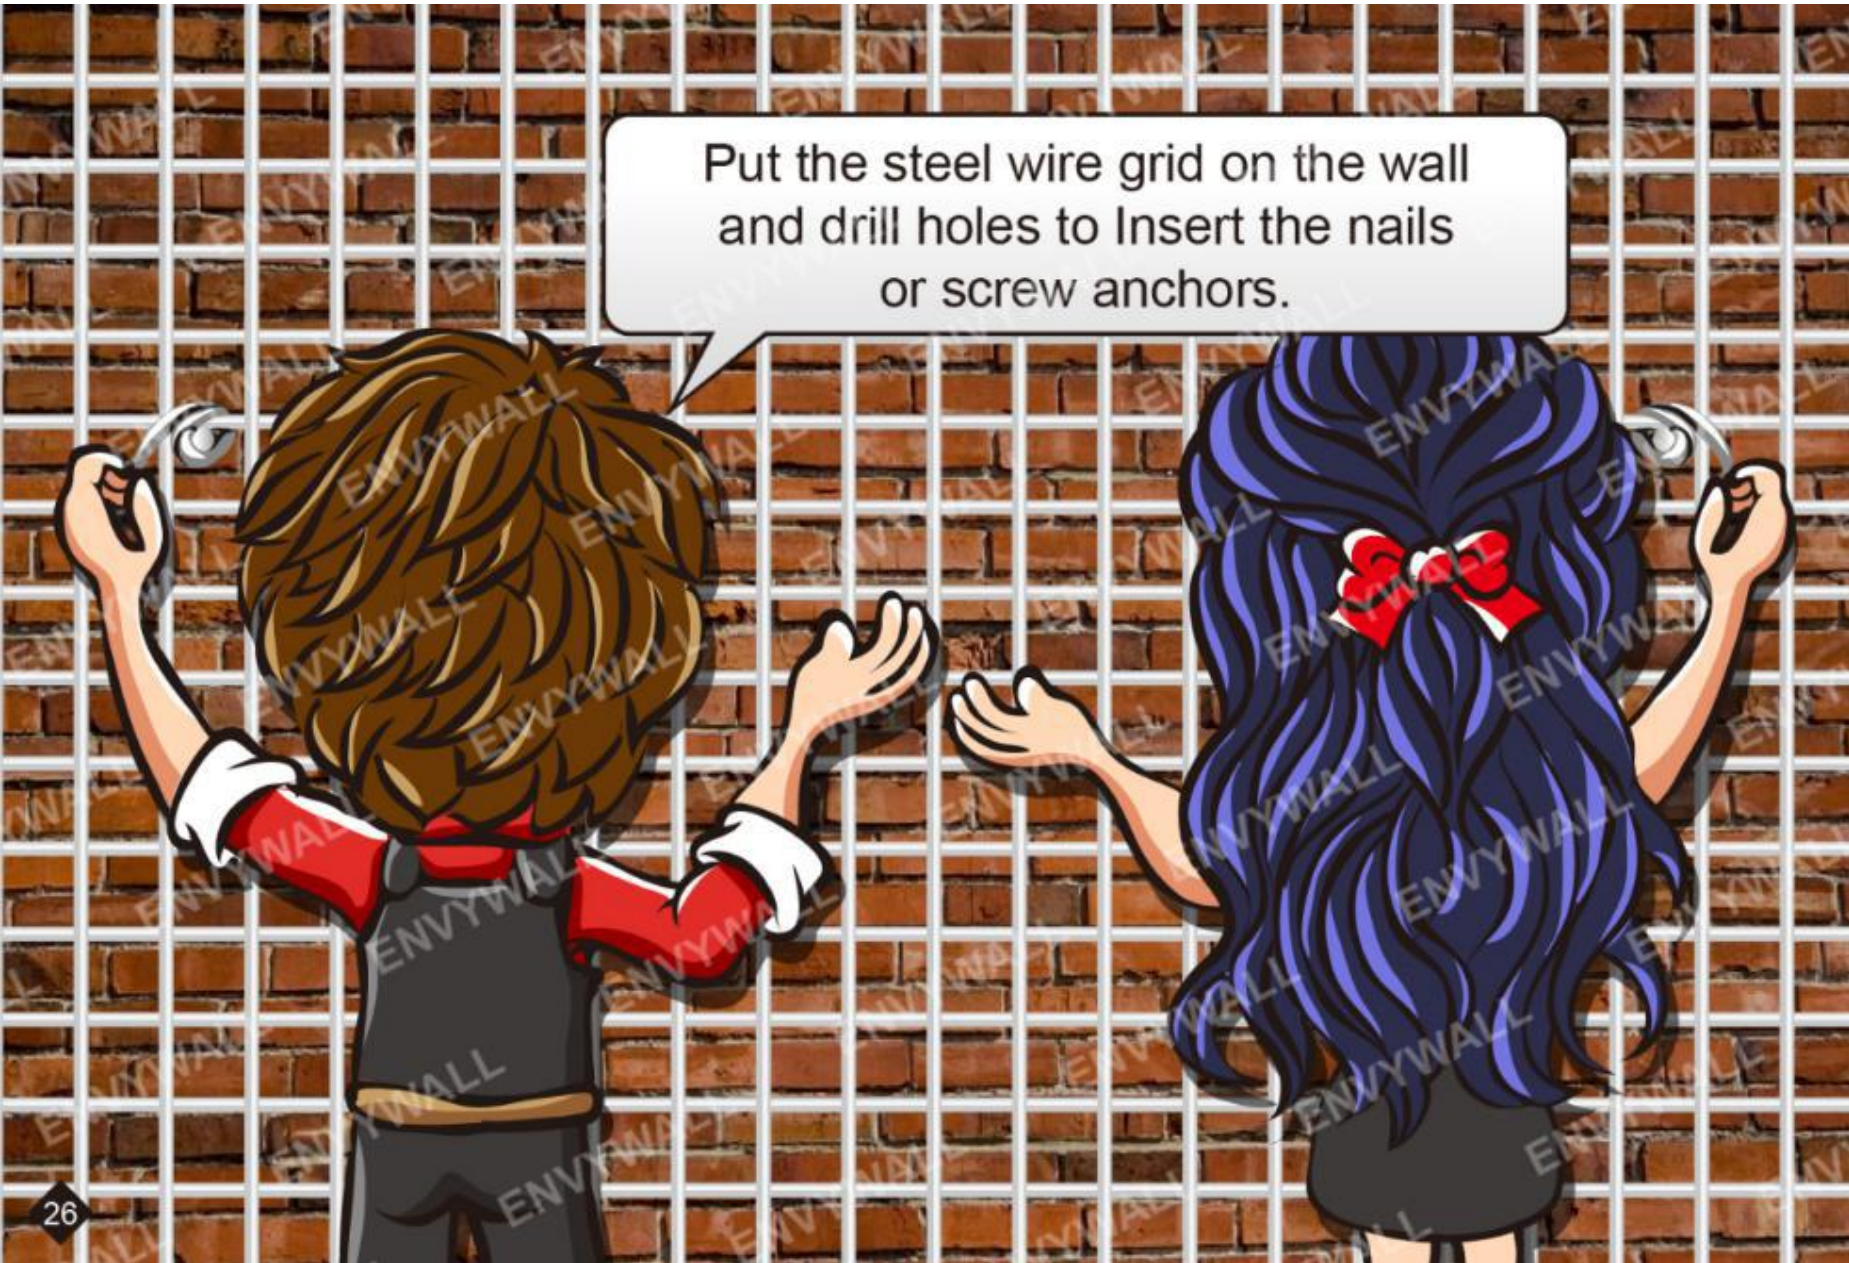

Put the steel wire grid on the wall  
and drill holes to Insert the nails  
or screw anchors.




Put the envywall mats on the steel wire grid, use zip ties to fasten the envywall mats and cut the extraparts of zip ties with scissors.



Finished!

You can cut the extra envywalls with scissors to make the envywalls fit your wall or fence better.



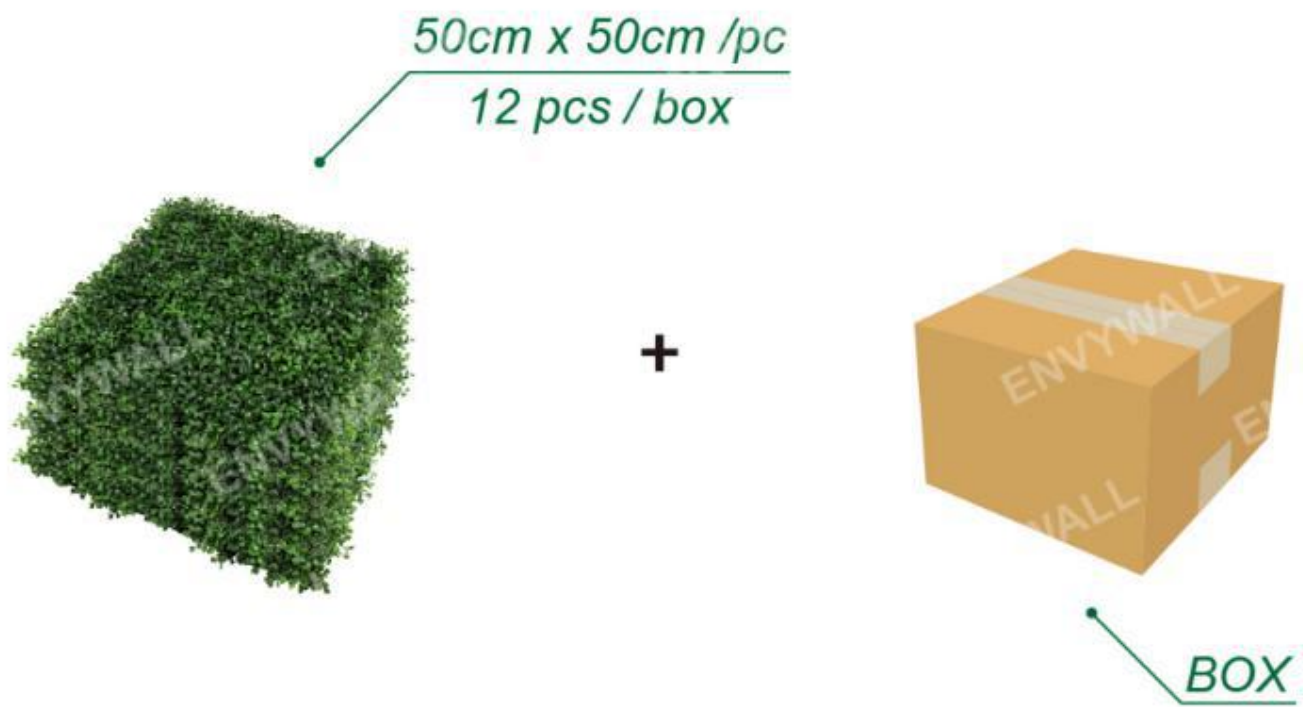

**ENVYWALL by Rymar North America**

1-888-924-7277

[www.rymar.ca](http://www.rymar.ca)